



# steps


- 1** The base should arrive with the tray (T) in position. Place the grille (G) into the base.

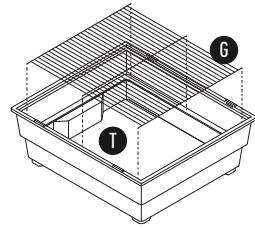


- 2** Unflatten the cage (C) body, opening the one-piece mesh until it forms a rectangle. Set the cage body into the base. Catch the cage wire loops (along the bottom edge) into the slots on the cage base. There are two along the front and two along the back.

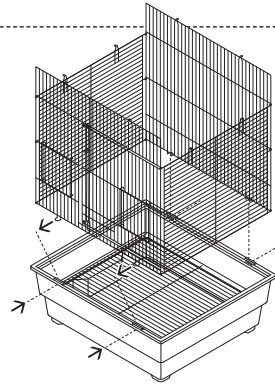

- 3** Assemble the two-piece cups. The opening in the hooded top faces the perch. Snap the top into the base. Lift up the small sliding doors and put the cups into place; cup openings facing in. Install the two perches from cage-side to cage-side, on parallel horizontal cage wires.

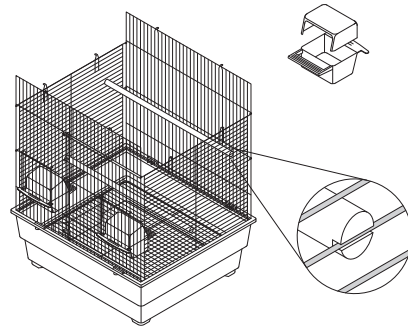

- 4** To assemble the roof (R1), start with the left end. Hook the vertical roof wire onto the two wire loops along the left side top edge of the cage body. Following this method, hook the roof onto two loops along the back edge, then front edge; twist and contort the roof mesh to fit. Finish with the right side top edge.

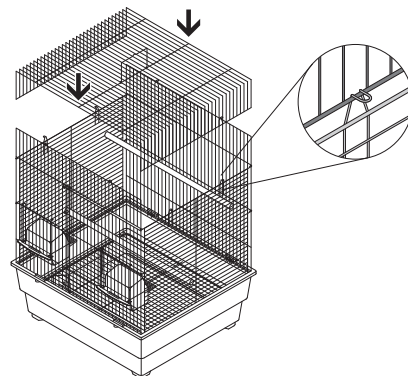

☆ Your cage is now fully assembled!

ph PREVUE PET PRODUCTS

# cage assembly instructions

Small / Medium Cage  
Model: # Econo-1614

cage: 15¾" L × 14" W × 18¼" H  
interior: 15" L × 13" W × 16¼" H  
wire gauge: 12 & 16  
wire spacing: ½"

## getting started!

### READ THESE NOTES FIRST:

• **Review All Parts:** If parts have been damaged, please contact Prevue Customer Service.

• **Tools:** No tools are necessary for the assembly of this cage.  
NOTE: You may want to have a pair of needle nose pliers to straighten or adjust any cage wires or wire loops.

Review these instructions thoroughly before attempting to assemble cage. If you still require assistance, please contact Prevue Customer Service at 800.243.3624 or through links online at [prevuepet.com](http://prevuepet.com)

## parts

